

MULTI-FUNCTION MOSQUITO LAMP



HOW TO USE:

Battery: Twist off top cover, then twist off the interior cap to expose battery compartment. If battery is inserted, you will need to remove the protective covering. If not already inside, place the included battery into the compartment and replace the lid. (Tip: the battery is not marked so if it does not work simply flip the battery over)

To activate mosquito zapper: Press the Ultraviolet LED Mosquito Zapper Button to turn on/off. Place the lamp in a completely dark environment.

Lantern: Press the Lighting Adjustment Button to activate the 3 lighting modes, 1) bright flashlight mode--320LM; 2) softer lighting mode--100LM 3) SOS strobe light mode--350LM

Charge: Open the rubber input cover, plug in USB charging cord, and plug into a USB outlet. The interior indicator light illuminates red when charging and green when fully charged. When not being charged, the rubber cover should be closed to prevent damaging the charging port.

Cleaning: Ensure the unit is turned off, then use the small brush (enclosed under the lid) to dust out any dead bugs from the interior net. The unit is waterproof so you can also get it wet to clean it.

MULTI-FUNCTION MOSQUITO LAMP

Precautions:

- KEEP OUT OF THE REACH OF CHILDREN
- Although the power grid has a safety fence, you should not touch it
- Do not look directly into the LED as this may cause damage to your eye
- When not being charged, the rubber cover should be closed to prevent damaging the charging port.
- Although the unit is waterproof submerging it in water for long periods of time will damage it

Charge Times:

- 16 hours for lantern-only
- 12 hours for zapper-only
- 8 hours for flashlight-only

Specifications:

- Weight: 5oz
- Size: 5x3x3
- Effective Range: 16 ft x 16 ft
- Flashlight: 320LM
- Lantern: 100LM
- SOS: 350LM
- Charging Time: 3h